

HELP IS THREE PRESSES AWAY.

Wear the wristband while at the resort. If you need urgent help, use the red SOS button.

**3×**

IN AN EMERGENCY

PRESS THE SOS BUTTON 3 TIMES QUICKLY**Press • Press • Press**

KNOW THE LIGHTS

The light tells you what your wristband is doing.

**SOS is being sent**

Red flashing continuously

**Alert received**

Green flashing continuously

**Wristband is working**

One green flash every 10 seconds

**Battery is low**

One red flash every 10 seconds – tell resort staff or charge it

**Connecting to gateway**

Blue light – wait until it turns green

**Pressed by mistake?**

Press the SOS button twice to cancel the alert on the band. Staff also cancel it in the RapidReach app.

KEEP THE WRISTBAND ON WHILE YOU ARE AT THE RESORT.